


Quick Installation Guide

TL-MR3220  
3G/4G Wireless N Router

1 Package Contents

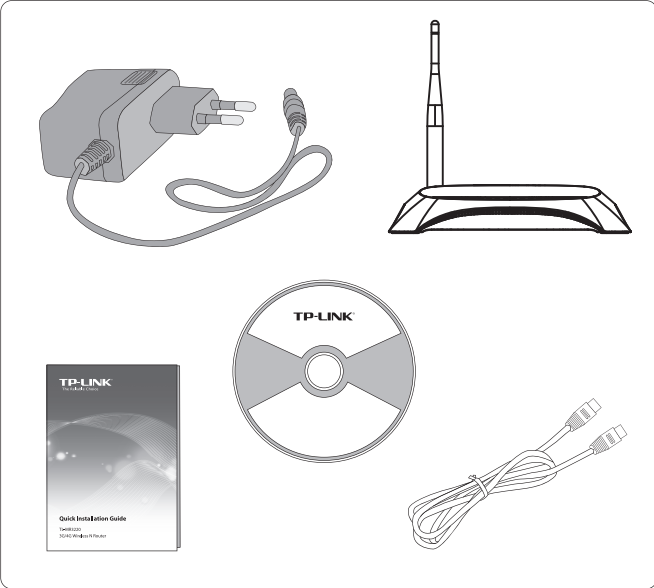

System Requirement

The following operating systems are supported:


- Windows XP
- Windows Vista
- Windows 7
- Windows 98
- Windows 2000
- Windows 2003
- Windows Me
- Mac
- Linux

The following browsers are supported:


- Internet Explorer
- FireFox
- Safari
- Chrome

2 Physical Description


• Front Panel



• Rear Panel

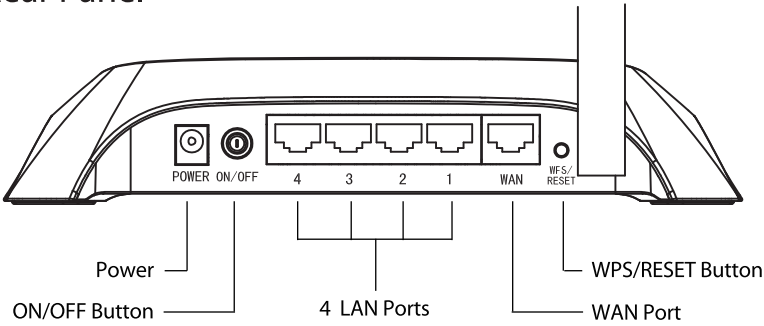

• Side Panel

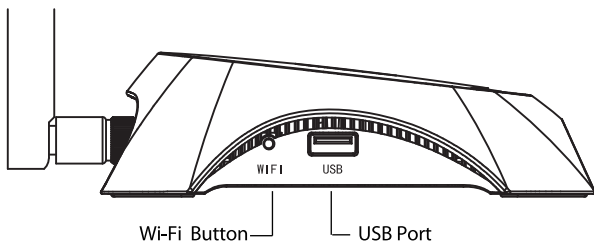


Item	Description
(Power)	<ul style="list-style-type: none"><li>• <b>On.</b> The electrical power is on.</li><li>• <b>Off.</b> There is no electrical power.</li></ul>
(System)	<ul style="list-style-type: none"><li>• <b>On.</b> The Router is initializing.</li><li>• <b>Flashing.</b> The Router is working properly.</li><li>• <b>Off.</b> The Router has a system error.</li></ul>
(WLAN)	<ul style="list-style-type: none"><li>• <b>Flashing.</b> The wireless function is enabled.</li><li>• <b>Off.</b> The wireless function is disabled.</li></ul>
(WAN) (LAN 1~4)	<ul style="list-style-type: none"><li>• <b>On.</b> A device is linked to the corresponding port.</li><li>• <b>Flashing.</b> There is data being received or sent on the corresponding port.</li><li>• <b>Off.</b> There is no device linked to the corresponding port.</li></ul>
(USB)	<ul style="list-style-type: none"><li>• <b>Off.</b> The USB 3G/4G modem is not connected.</li><li>• <b>Flashing.</b> Data is being received/sent through the 3G/4G modem.</li><li>• <b>On.</b> The USB 3G/4G modem is connected but no data being transferred.</li></ul>
(WPS)	<ul style="list-style-type: none"><li>• <b>Slow Flash.</b> A wireless device is connecting to the network. This process will last in the first 2 minutes.</li><li>• <b>On.</b> A wireless device has been successfully added to the network.</li><li>• <b>Quick Flash.</b> A wireless device failed to be added to the network.</li><li>• <b>Off.</b> WPS function is disabled.</li></ul>

3 Hardware Connection

TL-MR3220 supports both 3G/4G and WAN connection. If both the 3G/4G USB Modem and WAN port are connected, TL-MR3220 will choose one of them to access the Internet according to your configuration. For detailed information, please refer to Step 4 in **Part 4 Router Configuration**.


Connect TL-MR3220 to 3G/4G network

- 1 Connect the notebook/PC to the LAN port of TL-MR3220 with an Ethernet cable;
- 2 Plug the power adapter into the power jack of TL-MR3220;
- 3 Insert 3G/4G USB modem into the USB port (Ensure the SIM card is in the modem);
- 4 Press the ON/OFF button to power on TL-MR3220.

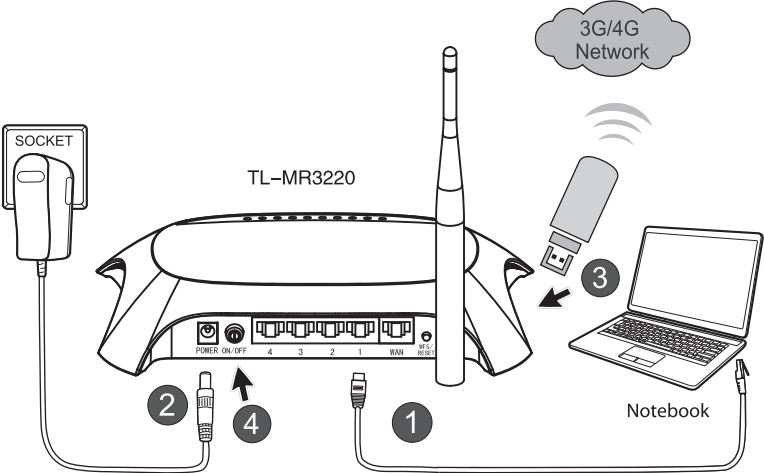

Connect TL-MR3220 to WAN network

- 1 Power off the ADSL/Cable Modem;
- 2 Connect the notebook/PC to the LAN port of TL-MR3220 with an Ethernet cable; Connect the ADSL/Cable Modem to the WAN port of TL-MR3220 with an Ethernet cable;
- 3 Plug the power adapter into the power jack of TL-MR3220;
- 4 Power on the modem and wait until all LEDs flash properly; Press the ON/OFF button to power on TL-MR3220.

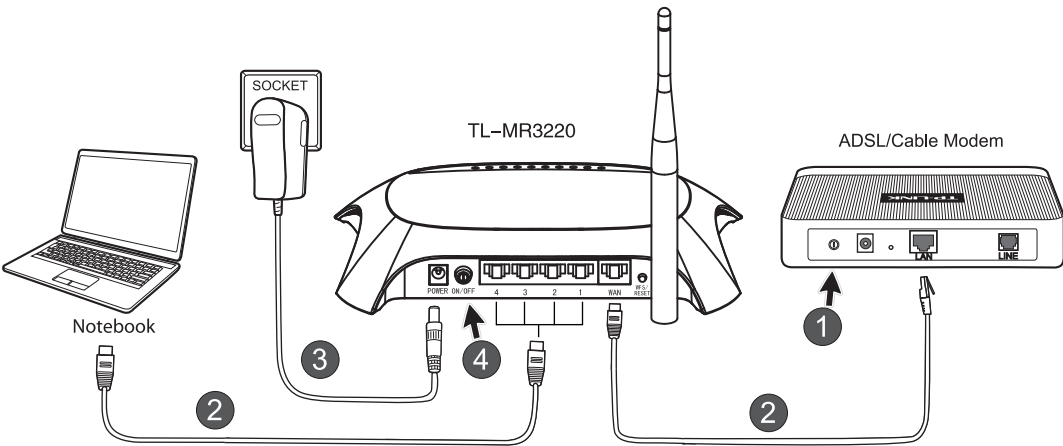


Warning:


1. We recommend you to use only the Power Adapter provided with the device.
2. Place the device on the level and stable surface.
3. Unplug the Power Adapter in the thunder storm to avoid damage.
4. Place the device in a well ventilated place far from any heater or heating vent.
5. Keep the Router far from the water to avoid damage.

## 4 Router Configuration

- 1 Open web browser, type in **http://192.168.0.1**, press **Enter**, then enter the user name and password (**admin/admin**) and click **“OK”**.

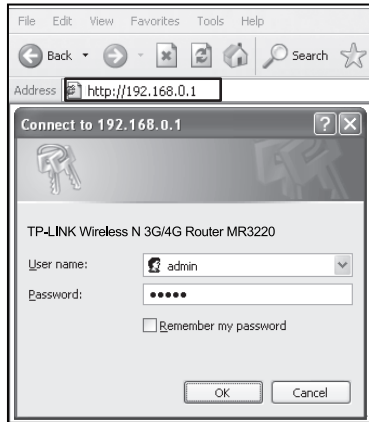


- 2 The **“Status”** web page will display after a successful login. Please check if your 3G/4G USB modem can be recognized or not. After the USB modem is recognized successfully, you will see the following screen.

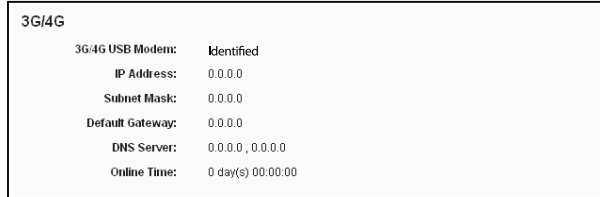


**Note:** If your 3G/4G USB modem can't be identified (shown as “Unknown Modem”), please refer to **T4~T6** in **Troubleshooting** for the solution.


- 3 Click **“Quick Setup”** menu, then click **“Next”** to continue.

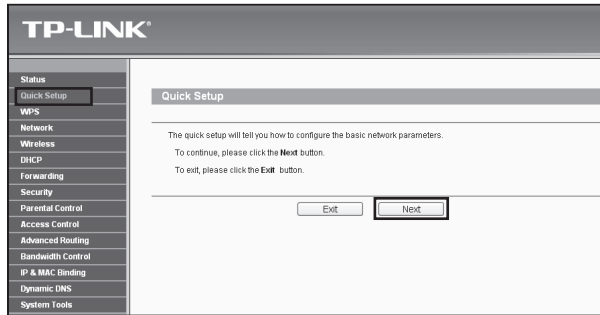

- 4 Select one Internet access mode, and then click **“Next”**. As follows we take **“3G/4G Only”** mode as an example.

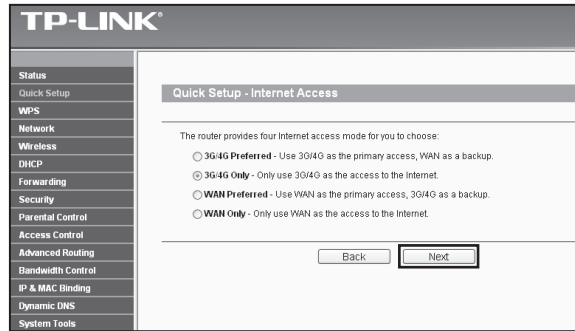


- 5 Select your location and mobile ISP, then click **“Next”**.

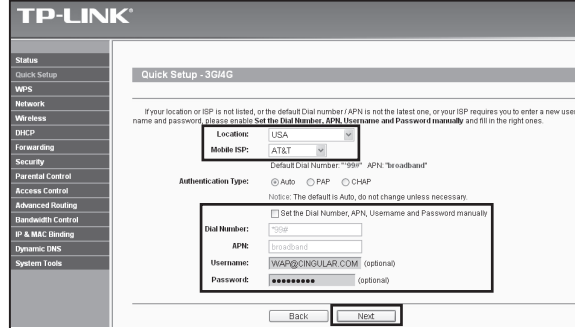


If you can't find your location in the pull-down list, please tick **“Set the Dial Number, APN, Username and Password manually”** to manually set them according to the information your 3G/4G ISP provided.

- 6 Set your Wireless parameters. TP-LINK strongly recommends you to edit the following two items, then click **“Next”**.

1. Create a unique and easy-to-remember **Wireless Network Name** (SSID). You can also keep the default settings.
2. Select the Wireless Security **“WPA-Personal/WPA2-Personal”**, and enter a security key using 8~64 characters (numbers or letters) in the **Password** field.

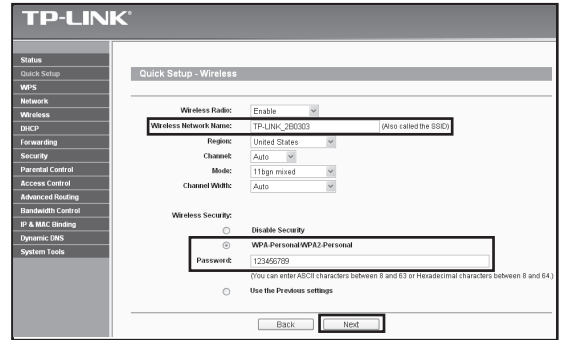

- 7 Click **“Reboot”** to complete the Quick Setup. Please note that if there is nothing changed on Wireless page, the **“Reboot”** button will be replaced by **“Finish”**.

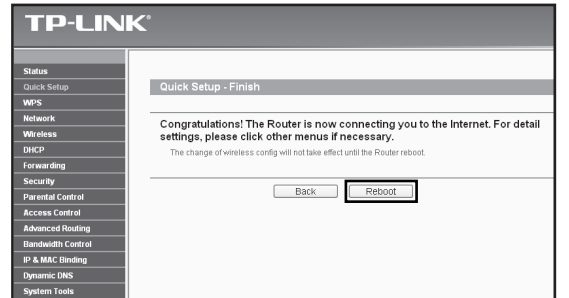

Congratulations! You can enjoy the 3G/4G surfing now.

## 5 Troubleshooting

### T1. What should I do if I don't know or forget my login password?

- (1) Restore the Router's configuration to its factory default settings. With the Router powered on, press and hold the **WPS/RESET** button on the rear panel for 8 to 10 seconds before releasing it.
- (2) Use the default user name and password: **admin, admin**.
- (3) Try to configure your Router once again by following the previous steps of this QIG.

### T2. What should I do if I cannot log in the web-based management page after I have successfully connected the Router?

You need to configure your PC(s) to “Obtain an IP address automatically” and “Obtain DNS server address automatically”.

As for this, please follow the instructions below.

- 1) For Windows XP/ Windows 2000:  
Click **“Start -> Control Panel -> Network and Internet Connections -> Network Connections”**.  
For Window Vista/ Windows 7:  
Click **“Start -> Settings -> Control Panel -> View network status and tasks -> Manage network connection”**.
- 2) Right-click **“Local Area Connection”**, and then click **“Properties”**.
- 3) Select **“Internet Protocol (TCP/IP)”** in Windows XP/2000 or **“Internet Protocol Version 4 (TCP/IPv4)”** in Windows Vista/7. Then click **“Properties”**.
- 4) Select **“Obtain an IP address automatically”** and **“Obtain DNS server address automatically”**. Then click **“OK”**.

### T3. What should I do if I cannot get Internet access with an identified 3G/4G USB modem?


- (1) Please insert a suited SIM/UIM card into the 3G/4G USB modem correctly.
- (2) Please plug your 3G/4G USB modem directly into your PC and disable the PIN verification via modem utility.
- (3) Please verify that your Internet connection is working on your PC.
- (4) Ask your ISP for the latest dial number and APN, correct the pre-set information manually.

### T4. What should I do when the “Unknown Modem” message displays?

- (1) Please go to our website: **www.tp-link.com**, click the tab **“Support”** and select **“3G/4G USB Modem Compatibility List”**. Then please check and make sure that your 3G/4G USB modem is on the compatibility list.
- (2) If your 3G/4G USB modem is on our list but the Router shows “Unknown Modem”, please go to our website to download the latest firmware or bin file and upgrade the Router.
- (3) If the latest firmware or bin file cannot support your modem, please contact our technical support.


### T5. How to update the firmware?

- (1) We're continuously testing newly emerged 3G/4G modem worldwide to provide the best compatibility between our 3G/4G Router and the 3G/4G USB modems. To enjoy the best user experience, we strongly suggest that you download the latest firmware from our website: **http://www.tp-link.com/en/support/download/**.
- (2) Choose menu **“System Tools -> Firmware Upgrade”**, and then you can update the latest version of firmware for the Router on the following screen.

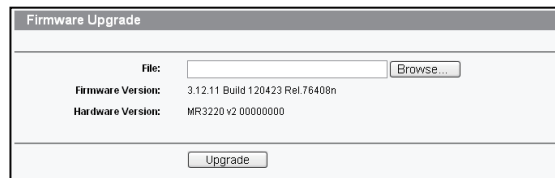

### T6. How to upgrade the bin file?

- (1) Download a most recent 3G USB modem bin file from our website: **www.tp-link.com**.
- (2) Log in the web-based management page. Then go to **“Network -> 3G/4G”**, and click **“Modem Settings”**.
- (3) On the “3G/4G USB Modem Settings” page, click **“Add New...”**.
- (4) On the “Upload 3G/4G USB Modem Configuration File” page, enter or click **“Browse...”** to select the path name where you save the downloaded file on the computer into the **File** field. Then click **“Upload”** to complete upgrading the bin file.

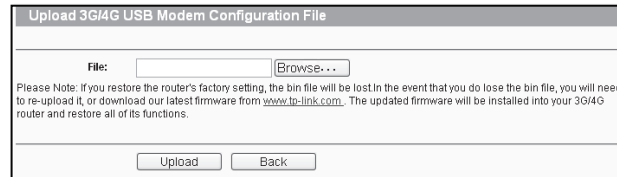

**Note:** For more troubleshooting help, please refer to **FAQ(ID:400)** on our website: **http://www.tp-link.com/en/support/faq**.

## Technical Support

- For more troubleshooting help, go to **www.tp-link.com/support/faq.asp**
- To download the latest Firmware, Driver, Utility and User Guide, go to **http://www.tp-link.com/en/support/download/**
- For all other technical support, please contact us by using the following details:
  - Global**  
Tel: +86 755 26504400  
E-mail: support@tp-link.com  
Service time: 24hrs, 7 days a week
  - Singapore**  
Tel: +65 62840493  
E-mail: support.sg@tp-link.com  
Service time: 24hrs, 7 days a week
  - UK**  
Tel: +44 (0) 845 147 0017  
E-mail: support.uk@tp-link.com  
Service time: 24hrs, 7 days a week
  - USA/Canada**  
Toll Free: +1 866 225 8139  
E-mail: support.usa@tp-link.com  
Service time: 24hrs, 7 days a week
  - Malaysia**  
Tel: 1300 88 875465 (1300 88TPLINK)  
E-mail: support.my@tp-link.com  
Service time: 24hrs, 7 days a week
  - Russian Federation**  
Tel: 8 (499) 754-55-60  
8 (800) 250-55-60  
(toll-free call from any RF region)  
E-mail: support.ru@tp-link.com  
Service time: From 10:00 to 18:00 (Moscow time)
  - \*Except weekends and holidays in Russian Federation
  - Indonesia**  
Tel: (+62 ) 021 6259 135  
E-mail: support.id@tp-link.com  
Service time: Monday to Friday 9:00 - 12:00; 13:00 - 18:00  
\*Except public holidays
  - Switzerland**  
Tel: +41 (0)848 800998 (German Service)  
E-mail: support.ch@tp-link.com  
Fee: 4-8 Rp/min, depending on rate of different time  
Service time: Monday to Friday 9:00 AM to 6:00 PM. GMT+1 or GMT+2 (Daylight Saving Time)
  - Australia & New Zealand**  
Tel: AU 1300 87 5465  
NZ 0800 87 5465  
E-mail: support@tp-link.com.au  
Service time: 24hrs, 7 days a week
  - Turkey**  
Tel: 444 19 25 (Turkish Service)  
NZ 0800 87 5465  
E-mail: support.tr@tp-link.com  
Service time: 9:00 AM to 6:00 PM, 7 days a week
  - Italy**  
Tel: +39 02 66987799  
E-mail: support.it@tp-link.com  
Service time: Monday to Friday, 9:00 AM to 6:00 PM
  - Ukraine**  
Tel: +380 (44) 590-51-14  
E-mail: support.ua@tp-link.com  
Service time: Monday to Friday 14:00 PM to 22:00 PM
  - Brazil**  
Toll Free: 0800-770-4337  
(Portuguese Service)  
E-mail: suporte.br@tp-link.com  
Service time: Monday to Saturday 08:00 AM to 08:00 PM
  - Poland**  
Tel: +48 (0) 801 080 618 / +48 22 721 7563 (if calls from mobile phone)  
E-mail: support.pl@tp-link.com  
Service time: Monday to Friday 9:00 AM to 5:00 PM. GMT+1 or GMT+2 (Daylight Saving Time)
  - Germany / Austria**  
Tel :+49 1805 875465 (German Service)  
+49 1805 TPLINK  
E-mail: support.de@tp-link.com  
Fee: 0.14 EUR/min from the German fixed phone network and up to 0.42EUR/min from mobile phone.  
Service Time: Monday to Friday, 9:00 AM to 6:00 PM. GMT+1 or GMT+2 (Daylight Saving Time in Germany)  
\* Except bank holidays in Hesse